

### FEATURE

- **Installation:** Factory Install - Sensor Integral to Fixture, Lens External
- **Commissioning:** through Remote Control
- **Control:** Hold time, High-Low setting, Continuous Bi-Level Dimming, Manual/Auto - On/Off
- **Sensor:** Motion (Occupancy/Vacancy/Manual)




### SPECIFICATIONS

**SENSOR TYPE:** Passive Infrared Sensor (PIR)  
**INPUT VOLTAGE:** 120/277VAC  
**LIGHT-CONTROL:** 10 ~ 50LUX  
**CONTROL OUTPUT:** 0-10V  
**OPERATING TEMP:** -40°F ~ +158°F (-40°C ~ +70°C)



**COMMISSIONING RANGE:** 50FT from Remote Control  
**TIME SETTING:** 10sec ~ 60min (adjustable)  
**DETECTION ANGLE:** 360°  
**MOUNTING HEIGHT:** 8 - 40FT  
**WARRANTY:** 5 years  
**IP RATING:** IP66

### DIMENSIONS

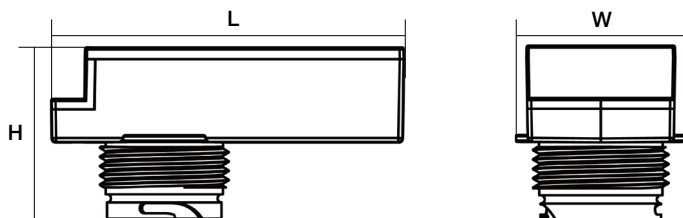

L	W	H
3.5" (90mm)	1.6" (41mm)	1.7" (43mm)

### COVERAGE PATTERNS

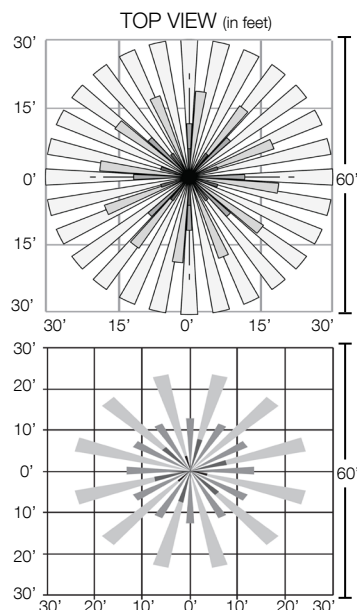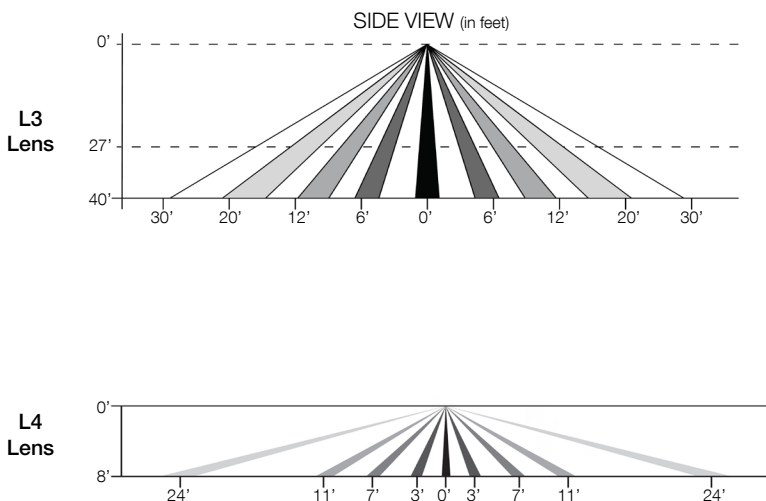

### ORDER CODE

EXAMPLE: SENSOR-823-D3

#### A SERIES

SENSOR-823 Integral PIR on/off/dimming/photosensing

#### B LENS

Code	Mounting	Coverage
D3	40FT	30FT Radius
D4	8FT	24FT Radius

### FEATURE

The Remote control wireless IR configuration tool is a handheld tool for remote configuration of IR-enabled fixture integrated sensors. The tool enables device to modify via push button and stores up to four sensor parameter modes to speed configuration of multiple sensors.

	PROGRAMMABLE	RESET
<b>COMPATIBLE SENSORS</b>	SENSOR-ANT-6-4T SENSOR-ANT-6-4T-EM SENSOR-ANT-6-4T-H SENSOR-ANT-6-4T-H-EM SENSOR-ANT-7 SENSOR-ANT-3C-B1 SENSOR-819-D1/D2 SENSOR-823 SENSOR-820	SENSOR-BLE-6-4T SENSOR-BLE-7 SENSOR-BLE-7D SENSOR-BLE-819 SENSOR-BLE-619 CONTROL-BLE-5-4T WALLSWITCH-BLE-101 WALLSWITCH-BLE-204

### SPECIFICATION

#### Carrying Case

RC-100 in Carrying Case

#### Commissioning Range

Up to 50FT (15mm)

#### Operating Temp

32F ~ 122F (0°C ~ 50°C)

#### Power

2 x AAA 1.5V Alkaline batteries



#### Dimension

L - 4.84" (123mm)  
W - 2.76" (70mm)  
H - .80" (20.3mm) Thickness

#### BRIGHTNESS

Set output level (in 70%, 80%, 90%, or 100%) of connected lighting during occupancy.

#### SENSITIVITY

Set the sensitivity (in 20%, 50%, 75%, or 100%) of the occupancy sensor.

#### HOLD TIME

Set the time (in 10s, 1m, 5m, 10m, 16m, 20m, 30m, or 60m) that the fixture will hold at normal output after the space is vacant.

#### DAYLIGHT SENSOR

Set the threshold of natural light (in 10, 30, or 50) as setpoint to light on automatically for the sensor. If natural light is above the selected threshold, fixture will shut off. Set daylight (in 100, 300, 500) as setpoint to light off.

#### STAND-BY DIM/TIME

**DIM:** Set the output level (in 0%, 10%, 30%, or 50%) of the fixture during vacancy. This will only take place after Hold Time has elapsed.

**TIME:** Set the time (+∞, 1m, 30m, or 50m) that the sensor will remain in stand-by mode before powering down.

#### ON/OFF

Use this to manually power a fixture on or off.

#### AUTO

Press Auto to engage/unlock a sensor.

Press Auto, then press Display to show the sensors current setting parameters.

#### DISPLAY

Press to Display to view current setting parameters for each function. LED indicators will highlight current settings.

#### DIRECTIONAL ARROWS

Use the arrows to navigate the setting options by pressing up/down or left/right.

#### SEND

Press Send to upload displayed settings to individual sensor/fixture. The fixture will blink on and off to confirm new settings.

#### SMART DAYLIGHT SENSOR

Open and or close smart daylight sensor.

Press up/down arrows buttons to enter setting condition, the parameters LEDs of remote control will flash to be selected.

#### TEST

Used to test sensitivity of occupancy sensing.

Press Test, then the fixture will enter Test Mode, where Hold Time is only 2s.

While Test Mode is active, Stand-By and Daylight sensing will be disabled.

Press Auto to exit Test Mode.

#### RESET

Press Reset to put all parameters back to default settings.

#### MODE

Press the Mode # that you want to save.

Use Directional Arrows to select new parameters. Press OK to confirm.

